


MasterView Easy operation

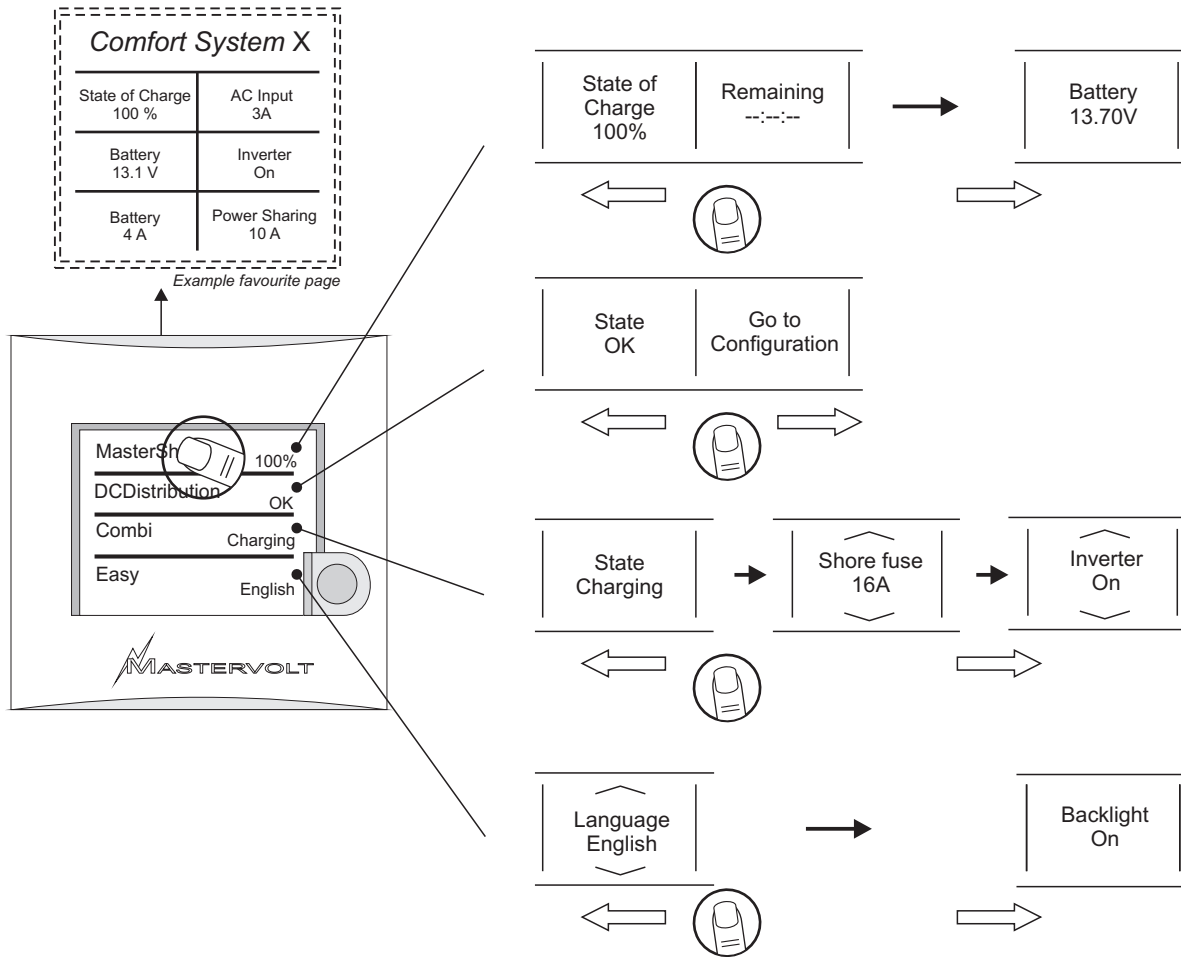

Frequently Asked Questions

| Situation | What may have happened? | What to do? |
|--|--|--|
| The MasterShunt monitoring page does not show the battery State of Charge. | The MasterShunt has not been configured. | Follow first setup instructions in the MasterShunt user's manual. |
| There is a MasterBus alarm „Fuse 1“. | DC Distribution Fuse #1 has blown. | Check the cause of the fuse to blow and replace it. |
| How to act during short storage? | You do not use your system for under two months. | Leave shore power connected, inverter switched OFF, disconnect consumers with Battery Switch. |
| How to act during long or winter storage? | You do not use your system for over two months. | Act like during a short storage OR charge your batteries to 100% State of Charge, turn the Combi switch to the OFF position, disconnect all battery switches. Charge batteries fully every three months. After winter, recharge the battery to 100% first for correct MasterShunt functioning. |

Package contents



1. Mass Combi 12/2500
2. MasterShunt 500
3. DC Distribution 500
4. Shore Power inlet 16 A
5. Shore cable 16 A
6. MasterView Easy panel
7. 250A ANL fuse


Mass Combi DIP settings for Gel/AGM batteries

In case of generator use, read the Mass Combi manual.


DIP switch A

- 1 2 3 4 5 6 7 8

DIP switch B

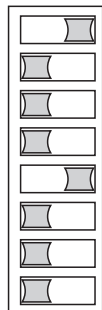

Installation overview

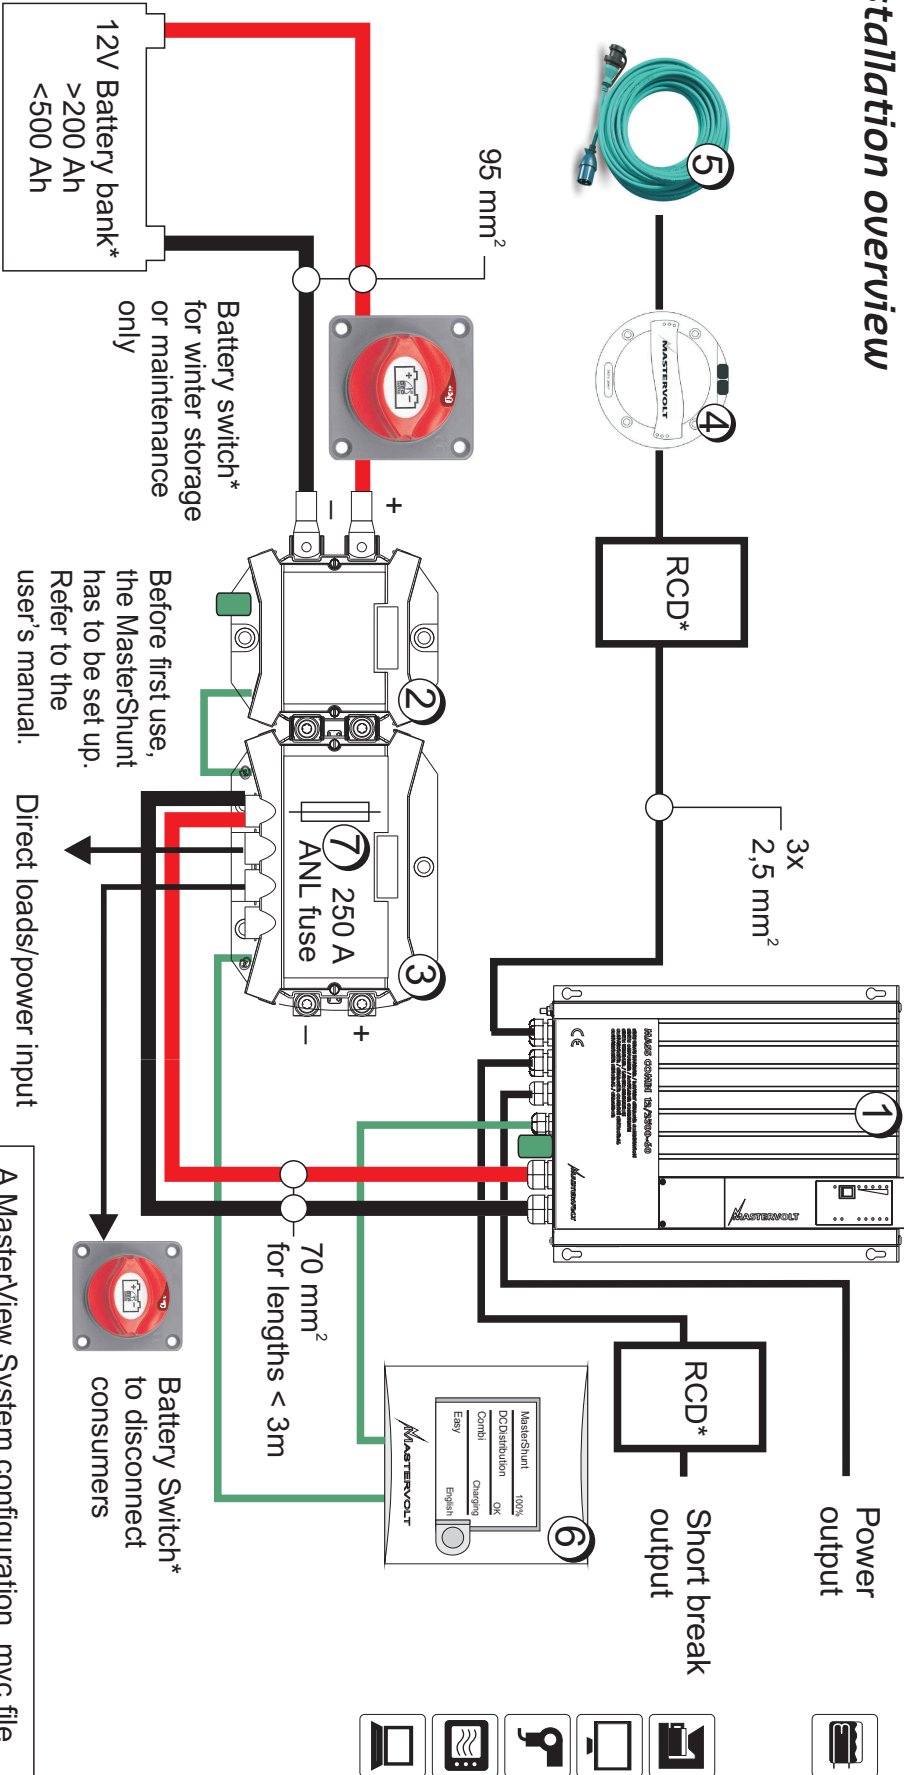

Battery switch* for winter storage or maintenance only

Before first use, the MasterShunt has to be set up. Refer to the user's manual.

Direct loads/power input

Battery Switch* to disconnect consumers

A MasterView System configuration .mvc file is available at mastervolt.com/marine/systems

* Not included